






 

 

 

 

 




 

 
 



 
 


 




 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|--------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | PP |  | Pre Ch |
|  | I-II |  | Dual |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | -- |  | Guide |
|  | P<P |  | Back |
|  | Menu |  | Menu |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|--------|
|  | Info |  | Info |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Red/Sound |  | Red |
|  | Green/Picture |  | Green |
|  | Yellow/Feature |  | Yellow |
|  | Blue/Install |  | Blue |
|  | TV |  | TV/R |
|  | AV |  | AV |
|  | [≡] |  | Text |
|  | [/≡] |  | Media |



