



Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------------------|--|-------|
| | POWER | | Power |
| | SOURCE | | AV |
| | VGA 1 | | 1 |
| | VGA 2 | | 2 |
| | VIDEO / PAGE | | 3 |
| | VIDEO / PAGE | | Ch + |
| | MENU / Left Click | | Menu |
| | ESC / PAGE | | Ch - |
| | ESC / PAGE | | Exit |
| | UP / | | Up |
| | LEFT | | Left |
| | ENTER | | Ok |
| | RIGHT / LOCK | | Right |
| | DOWN / | | Down |
| | VOLUME+ | | Vol + |
| | VOLUME- | | Vol - |
| | MUTE | | Mute |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|------------|--|--------|
| | COLOR MODE | | Smart |
| | BLANK | | Media |
| | ASPECT | | Format |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

