










 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	MTS		Display / Media
	C.C		Smart / List
	Return		Back / Return
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Guide		Guide / EPG / -/--
	Fav		Fav / Marker / PC
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Input		AV / Input / RDS
	Menu		Menu / Home
	Picture		Picture / Format
	Sound		Sound / Title
	Sleep		Sleep / Timer

