














 

 





 



 

 

 



 




**Originalfernbedienung   Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/Radio		TV/R
	←PR		Back
	EPG		Guide
	Menu		Menu
	FAV		Pre Ch

**Originalfernbedienung   Ersatzfernbedienung**

	Exit		Exit
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol+		Right
	Vol-		Vol -
	Vol-		Left
	OK/List		Ok
	↑		Up
	↓		Down
	Pause		Pause
	Red/Find		Red
	Green/Zoom		Green
	Yellow/TXT		Yellow
	Blue/Audio L/R		Blue
	SAT		Media
	Tv/AV		AV





Originalfernbedienung   Ersatzfernbedienung

	Sleep		Sleep
	[+]		3D
	Info		Info

Originalfernbedienung   Ersatzfernbedienung