 

 


 



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[TV]		TV/Radio /
	Internet		Smart / List
	↔		Fav / Marker / PC
	Mute		Mute / Dimmer
	Vol+		Vol+

**Originalfernbedienung    Ersatzfernbedienung**

	Vol-		Vol-
	P+		CH+ / Page+
	P-		CH- / Page-
	OK		OK
	Menu		Menu / Home
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Q.Menu		D.Menu / Top
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	i		Info / Angle
	EPG		Guide / EPG / -/-
	TXT		Text / Goto
	Lang.		Audio / Lang I/II
	Subt.		Subtitle / EQ





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Red		Red / Netflix / Search				
	[>]		Picture / Format				
	[+]		Zoom / Size				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	*1/O		Shift + 1				
	*2/Q		Shift + 2				
	Blue		Blue / Prime Video / Random				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	<<		<< / Tune-				
	Stop		Stop / Hold				

