








 
 

 



 





 
 
 











 
 




 
 


 
 

 

 

 
 





 
 
 

 
 





**Originalfernbedienung Ersatzfernbedienung**

 
 

 

 




 
 
 

 
 
 
 

 

 








 



	Power		Power
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Exit		Exit
	Back		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Info		Info

**Originalfernbedienung Ersatzfernbedienung**

	Menu		Menu
	Mute		Mute
	Source		AV
	Swap		Pre Ch
	0		0
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide
	Text		Text
	FAV		Shift + Pre Ch



**Originalfernbedienung   Ersatzfernbedienung**

	Sleep		Sleep
	Subtitle		Subt
	Lang		Dual
	Screen		Format
	Presets		Eject
	Internet		Smart
	Multimedia		Media
	Play		Play
	My Button1		List
	My Button2		D. Menu
	Rec		Rec
	Pause		Pause
	Stop		Stop
	>>		>>
	<<		<<
	>>		>>
	<<		<<

**Originalfernbedienung   Ersatzfernbedienung**