



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info
	Setup		Options
	Menu		Menu
	Music		Media
	Copy		Pre Ch
	Zoom		Eject
	Tv System		TV/R
	Source		AV
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Home		Smart
	Return/X		Back
	Up		Up
	Down		Down
	Right		Right

 
 






















 


 


 


Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Goto		Guide
	Time Shift		3D
	Rec		Rec
	Play		Play
	Stop		Stop





Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	I<<		I<<
	Slow/I>		Sleep
	>>I		>>I
	>>>		>>>
	<<<		<<<
	Timer	 + 	Shift + AV
	A-B		Format
	Subtitle		Subt
	Repeat		Text
	Reclist		List
	Audio		Dual
	Red		Red
	Green/EPG		Green
	Yellow/TTX		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

