



 
 






 




 
 

 

 



 



 

 








 

 

 

 

 

 







Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	Tape Rec / Pause		Shift + Rec / Rec Mode
	Tape Deck A/B		Display / Media
	Tape <<		Shift + << /
	Tape Play		Shift + Play /
	Tape >>		Shift + >> /
	Tape DIR A		Red / Netflix / Search
	Tape Stop		Shift + Stop /
	Tape DIR B		Green / APP / Repeat
	CD Disc Skip		Smart / List
	CD I<<		I<< / Preset-
	CD Play		Play / Slow
	CD >>I		>>I / Preset+
	CD <<		<< / Tune-
	CD Pause/Stop		Pause / Step / Freeze
	CD Pause/Stop		Stop / Hold
	CD >>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	Tuner Preset -		CH- / Page-
	Tuner Preset +		CH+ / Page+
	Tuner A/B/C/D/E		Info / Angle
	MD		2
	Tape		5
	CD / DVD		3
	AUX		7
	Phono		4
	Tuner		6
	Volume -		Vol-
	Volume +		Vol+

