


 
 






 
 















 




 


 

 







 











 










**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	Mosaico		List
	DVR / Gravações		Media
	VOD / Videoclube		Smart
	Pesquisa		Shift + TV/R
	Exit		Exit
	Menu		Menu
	i		Info
	Vol +		Vol +
	Vol -		Vol -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	P +		Ch +

**Originalfernbedienung Ersatzfernbedienung**

	P -		Ch -
	Stop		Stop
	<<		<<
	Pause		Pause
	Play		Play
	>>		>>
	Rec		Rec
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	I<<		I<<
	Back		Back
	Radio / TXT		TV/R
	Radio / TXT		Text
	>>I		>>I
	1		1





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	GUIA /		Guide				
	* / AV		AV				
	# / -/--		Shift + Guide				

