










 
















 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Picture		Picture / Format
	Aspect		Shift + Picture / Format
	Sleep		Sleep / Timer
	Sound		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
















Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	Display		Display / Media
	Up		Up
	Input		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	TV / Radio		TV/Radio /
	EPG		Guide / EPG / -/-
	CH +		CH+ / Page+
	Vol -		Vol-
	Eject		Eject / Surround
	CH -		CH- / Page-



 

 



 

 



 

 

 









Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subtitle / EQ
	CH List		Smart / List
	Rec		Rec / Rec Mode
	Rec List		Shift + Smart / List
	TV/TXT / D.Pro		Shift + TV/Radio / Program
	TV/TXT / D.Pro		Text / Goto
	Cancel / D.Rep		Shift + Exit / Cancel / Clear
	Cancel / D.Rep		Shift + Green / APP / Repeat
	Reveal / D.Goto		Shift + Text /
	Nicam/A2 /		Shift + Play /
	Nicam/A2 /		Shift + Audio / Lang I/II
	Index / I<<<		I<<< / Preset-
	Hold / >>>I		>>>I / Preset+
	Hold / >>>I		Shift + Stop /
	Size / D.Zoom		Zoom / Size
	Subpage / D.Title		Shift + Sound / Title
	<<<		<<< / Tune-

Originalfernbedienung Ersatzfernbedienung

	>>>		>>> / Tune+
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Red / D.Set		Shift + OK
	Red / D.Set		Red / Netflix / Search
	Green / D.Menu		D.Menu / Top
	Green / D.Menu		Green / APP / Repeat
	Yellow / D.Sub.		Yellow / YouTube / Repeat
	Yellow / D.Sub.		Shift + Subtitle / EQ
	Blue / D.Lan		Blue / Prime Video / Random
	Blue / D.Lan		Audio / Lang I/II

