




 

 


 
 
 


 
 
 

 
 
 

 

 


 


 
 




 

 





 
 
 

 

 
 


 

 
 
 

 

 



 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Smart		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Guide		Guide
	Netflix		Media
	YouTube		Options
	Google Play		3D
	prime video		Shift + Media
	Home		Shift + Smart
	Menu		Menu
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Source		AV
	Red		Red





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Pause		Pause
	Stop		Stop
	Text		Text
	Subt		Subt
	Audio		Dual

