














 

 




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Menu	 Menu / Home
 0	 0
 Sortie	 Exit / Cancel / Clear
 Vol+	 Vol+
 Up	 Up
 P+	 CH+ / Page+

Original	Replacement
 Left	 Left
 OK	 OK
 Right	 Right
 Vol-	 Vol-
 Down	 Down
 P-	 CH- / Page-
 Info	 Info / Angle
 FAV	 Fav / Marker / PC
 Audio	 Audio / Lang I/II
 EPG	 Guide / EPG / -/--
 Red/RCL	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Pause	 Pause / Step / Freeze
 Yellow/Sous	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 SAT	 Shift + 0





	Original	Replacement	Original	Replacement
	Tv/R	 TV/Radio /		
	V.F	 Setup / OPT /		
	AV	 AV / Input / RDS		

