



| Original | Replacement | Original | Replacement |
|--|---|--|---|
|  Power |  Power |  Menu |  Menu / Home |
|  Mute |  Mute / Dimmer |  Up |  Up |
|  Play |  Play / Slow |  i |  Info / Angle |
|  Pause |  Pause / Step / Freeze |  Left |  Left |
|  Stop |  Stop / Hold |  OK |  OK |
|  Rec |  Rec / Rec Mode |  Right |  Right |
|  << |  << / Tune- |  Exit |  Exit / Cancel / Clear |
|  >> |  >> / Tune+ |  Down |  Down |
|  Lang |  Audio / Lang I/II |  Back |  Back / Return |
|  Source (Games) |  Eject / Surround |  Vol+ |  Vol+ |
|  Movie-Music-Phot |  Picture / Format |  World (Violet) |  Smart / List |
|  [≡].. |  Zoom / Size |  PR+ |  CH+ / Page+ |
|  */O |  Sleep / Timer |  Vol- |  Vol- |
|  TV |  TV/Radio / |  */Q |  Display / Media |
|  Q.Menu |  D.Menu / Top |  PR- |  CH- / Page- |
|  [-O-] |  Setup / OPT / |  1 |  1 |
|  [≡]/Text |  Text / Goto |  2 |  2 |





| | Original | Replacement | | Original | Replacement |
|--|----------|-----------------------------|--|----------|-------------|
| | 3 | 3 | | | |
| | 4 | 4 | | | |
| | 5 | 5 | | | |
| | 6 | 6 | | | |
| | 7 | 7 | | | |
| | 8 | 8 | | | |
| | 9 | 9 | | | |
| | Guide | Guide / EPG / -/-- | | | |
| | 0 | 0 | | | |
| | Red | Red / Netflix / Search | | | |
| | Green | Green / APP / Repeat | | | |
| | Yellow | Yellow / YouTube / Repeat | | | |
| | Blue | Blue / Prime Video / Random | | | |
| | Recall | Shift + Back / Return | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

| | | | | | |
|--|--|--|--|--|--|
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

