





 


















Original	Replacement
	Power
	Top Menu
	DVD Menu
	Tv/DVD
	Open/Close
	Shift + D.Menu / Top Menu
	D.Menu / Top
	TV/Radio /
	Eject / Surround
	Shift + Down
	Display / Media
	Subtitle / EQ
	Text / Goto
	1
	2
	3
	4
	5
	6
	7
	8

Original	Replacement
	9
	Audio / Lang I/II
	0
	Shift + AV Input / RDS
	Guide / EPG / -/-
	AV / Input / RDS
	Menu / Home
	Shift + Exit / Cancel / Clear
	Up
	Left
	OK
	Right
	Down
	Exit / Cancel / Clear
	Smart / List
	Back / Return
	Setup / OPT /



