



Original	Replacement
 Power	 Power
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 O)/I-II/Audio	 Audio / Lang I/II
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear

Original	Replacement
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 CH+	 CH+ / Page+
 Index	 Display / Media
 Vol+	 Vol+
 CH-	 CH- / Page-
 List	 Smart / List
 Vol-	 Vol-
 ♥	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 EPG	 Guide / EPG / -/-
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 <<	 << / Tune-







































Original	Replacement	Original	Replacement
 Green	 Green / APP / Repeat		
 >>	 >> / Tune+		
 Yellow	 Yellow / YouTube / Repeat		
 I<<	 I<< / Preset-		
 Blue	 Blue / Prime Video / Random		
 >>I	 >>I / Preset+		
 [≡]	 Text / Goto		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 [≡+]	 Zoom / Size		
 Stop/Still	 Stop / Hold		
 Radio	 TV/Radio /		
 [≡♦]/[++]	 Setup / OPT /		
 [≡x]	 Picture / Format		
 [≡o]/Subtitle	 Subtitle / EQ		
 DMP	 D.Menu / Top		
 Rec	 Rec / Rec Mode		




















 




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Text / Play/Pause	 Play / Slow
 Text / Play/Pause	 Pause / Step / Freeze
 Stop / Still	 Stop / Hold
 Rec	 Rec / Rec Mode
 Audio I/II	 Audio / Lang I/II
 Subtitle / [≡o]	 Subtitle / EQ
 [≡x]	 Picture / Format
 Size / Aspect	 Zoom / Size
 Sleep	 Sleep / Timer
 Radio	 TV/Radio /
 DMP	 D.Menu / Top
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle

Original	Replacement
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Recall	 Back / Return
 Vol +	 Vol+
 List	 Smart / List
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Index	 Display / Media
 CH -	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original	Replacement
 6	 6
 7	 7
 8	 8
 9	 9
 EPG	 Guide / EPG / -/--
 0	 0
 Fav	 Fav / Marker / PC
 Red / <<	 Red / Netflix / Search
 Green / >>	 Green / APP / Repeat
 Yellow / I<<	 Yellow / YouTube / Repeat
 Blue / >>I	 Blue / Prime Video / Random
 Text / Play/Pause	 Shift + Play /
 Red / <<	 Shift + Red / Netflix /
 Green / >>	 Shift + Green / APP /
 Yellow / I<<	 Shift + Yellow / YouTube /
 Blue / >>I	 Shift + Blue / Prime /

Original	Replacement

