 

 


 
 
 
 




 

 

 
 
 

 
 


 
 


 



 
 
 
 

 
 


 
 
 


 

 
 
 






 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Mute	 Mute
 Source	 AV	 P+	 Ch +
 TV	 TV/R	 P-	 Ch -
 1	 1	 Menu	 Menu
 2	 2	 Tools	 Options
 3	 3	 Return	 Back
 4	 4	 Info	 Info
 5	 5	 Exit	 Exit
 6	 6	 Enter	 Ok
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 -/--	 GUIDE	 HDMI	 Smart
 PRE-CH	 Pre Ch	 TTX/MIX	 Text
 Vol+	 Vol +	 P.Size	 Format
 Vol-	 Vol -	 P.Mode	 Shift + Format





Original	Replacement	Original	Replacement
 E.Mode	 Dual		
 DMA	 Subt		
 CH List	 List		
 SRS	 Shift + Dual		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Rec	 Rec		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		
 Play	 Play		
 Stop	 Stop		

