



 

 

 



 





 











 

 






Original	Replacement
 Power	 Power
 Tv/Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 *	 D.Menu / Top
 Cable	 AV / Input / RDS
 1	 1
 Live Zoom	 Zoom / Size
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 Search	 Display / Media

Original	Replacement
 Guide	 Guide / EPG / -/-
 0/Quick Access	 0
 Info	 Info / Angle
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Home	 Menu / Home
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Text	 Text / Goto
 Up	 Up
 Netflix	 Shift + Red / Netflix /
 Down	 Down
 Amazon	 Shift + Blue / Prime
 Right	 Right





Original		Replacement	
	T.Opt/Magic Link		Setup / OPT /
	Left		Left
	OK		OK
	AD		Audio / Lang I/II
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Stop/Line Tv		Stop / Hold
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Replacement

