





 

 





 









 





 









 





 






















| Original | Replacement |
|---|--|
|  |  Power |
|  |  Mute / Dimmer |
|  |  1 |
|  |  2 |
|  |  3 |
|  |  4 |
|  |  5 |
|  |  6 |
|  |  7 |
|  |  8 |
|  |  9 |
|  |  Smart / List |
|  |  0 |
|  |  Back / Return |
|  |  Vol+ |
|  |  Picture / Format |
|  |  Sound / Title |

| Original | Replacement |
|---|--|
|  |  CH+ / Page+ |
|  |  Vol- |
|  |  AV / Input / RDS |
|  |  CH- / Page- |
|  |  Up |
|  |  Left |
|  |  OK |
|  |  Right |
|  |  Exit / Cancel / Clear |
|  |  Down |
|  |  Menu / Home |
|  |  Zoom / Size |
|  |  Sleep / Timer |
|  |  Rec / Rec Mode |
|  |  Shift + Rec / Rec Mode |
|  |  Red / Netflix / Search |
|  |  Green / APP / Repeat |



