





 

 





 









 





 


































 













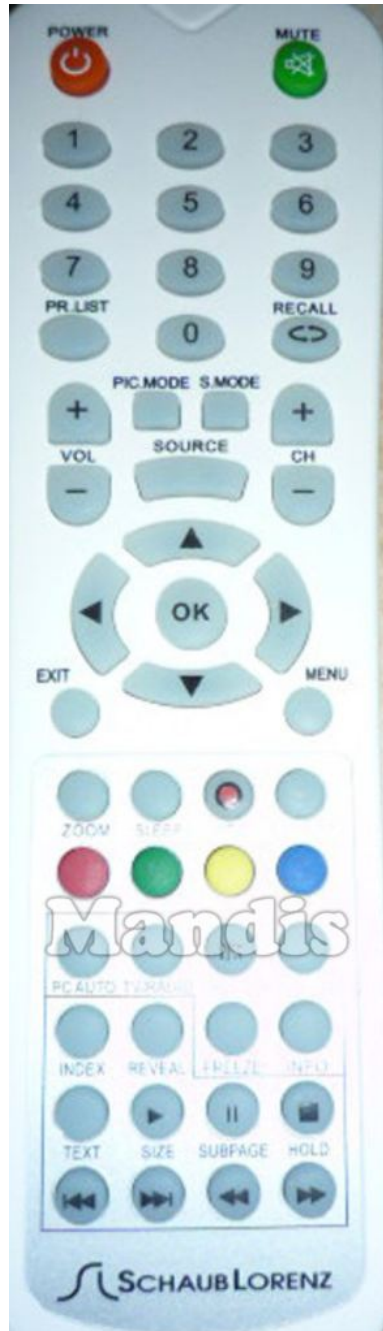



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	PR.List		Smart / List
	0		0
	Recall		Back / Return
	Vol+		Vol+
	Pic.Mode		Picture / Format
	S.Mode		Sound / Title

Original	Replacement	Original	Replacement
	CH+		CH+ / Page+
	Vol-		Vol-
	Source		AV / Input / RDS
	CH-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Menu		Menu / Home
	Zoom		Zoom / Size
	Sleep		Sleep / Timer
	Rec		Rec / Rec Mode
	Rec List		Shift + Rec / Rec Mode
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Original	Replacement
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 PC Auto Eject / Surround
	 Tv/Radio TV/Radio /
	 I/II/Audio Audio / Lang I/II
	 Subtitle Subtitle / EQ
	 Index Display / Media
	 Reveal Shift + Back / Return
	 Freeze Shift + Pause / Step /
	 Info Info / Angle
	 Text Text / Goto
	 Play/Size Play / Slow
	 Pause/Subpage Pause / Step / Freeze
	 Stop/Hold Stop / Hold
	 I<< I<< / Preset-
	 >>I >>I / Preset+
	 << << / Tune-

Original	Replacement
	 >> >> / Tune+

