

 
 
















 

 



 
 



 





Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 Audio/Nicam	 Dual
 Display	 Shift + Info
 Exit	 Exit
 Auto	 Smart

Original	Replacement
 Tv Menu	 Menu
 -/--	 Shift + Guide
 Guide	 Guide
 Source	 AV
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 CH-	 Ch -
 CH+	 Ch +
 Vol-	 Vol -
 Vol+	 Vol +
 Text	 Text
 <<	 <<
 >>	 >>
 Hold	 Options





Original	Replacement
	Info
	I<<
	Format
	>>I
	Play
	Stop
	3D
	Sleep
	Rec
	Media
	Shift + Text
	Shift + Pre Ch
	Shift + AV
	Subt
	TV/R
	Red
	Green

Original	Replacement
	Yellow
	Blue
	Shift + Format
	Shift + Dual

