

 

 




 




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Internet	 Smart / List
 Source	 AV / Input / RDS
 Lang	 Audio / Lang I/II
 Tv/Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 LIB	 Picture / Format
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Replacement
 >>	 >> / Tune+
 Menu	 Menu / Home
 Up	 Up
 Back	 Back / Return
 Left	 Left
 OK	 OK
 Right	 Right
 i	 Info / Angle
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 P:::P	 Display / Media
 PR+	 CH+ / Page+
 Vol-	 Vol-
 FAV	 Fav / Marker / PC
 PR-	 CH- / Page-
 1	 1





Original		Replacement		Original		Replacement	
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Text		Text / Goto				
	0		0				
	Guide		Guide / EPG / -/--				

