

 
 


 



 

 
 
 


 
 



 
 


 



 
 


 
 


 



 
 


 
 
 

 
 
 
 
 
 
 

 

 

 

 
 
 
 
 
 
 




Original	Replacement	Original	Replacement
 Power	 Power	 6	 6
 Tv/TXT	 Text	 7	 7
 Input	 AV	 8	 8
 OK	 Ok	 9	 9
 Up	 Up	 0	 0
 Down	 Down	 Back	 Back
 Right	 Right	 FAV	 Shift + Pre Ch
 Left	 Left	 Menu	 Menu
 Vol+	 Vol +	 Exit	 Exit
 Vol-	 Vol -	 Nicam/A2	 Shift + Guide
 CH+	 Ch +	 Display	 Shift + Info
 CH-	 Ch -	 Mute	 Mute
 1	 1	 Picture	 Format
 2	 2	 Sound	 Dual
 3	 3	 Sleep	 Sleep
 4	 4	 Subtitle	 Subt
 5	 5	 EPG	 Guide





Original		Replacement		Original	Replacement
	CH/List		Pre Ch		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue/Screen		Blue		
	Play		Play		
	Pause		Pause		
	Stop		Stop		
	Record		Rec		
	>>/Size		>>		
	<</Hold		<<		
	Cancel		Shift + Back		
	Reveal/Rep		Eject		
	I<</Subpage		D. Menu		
	>>I/Index		Info		
	List		List		

