


 


 



 
 



 










 
 

 
 
 
 
 
 
 


 

 
 
 


 
 
 


 
 




 













 
 

 



 


 





Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Up		Up		Exit/-/--		Exit
	Down		Down		PP		Pre Ch
	Right		Right		Swap/P<P		Smart
	Left		Left		CH+		Ch +
	OK/Select		Ok		CH-		Ch -
	M		Menu		Vol+		Vol +
	[i]/Info		Info		Vol-		Vol -
	1		1		Mute		Mute
	2		2		I-II		Dual
	3		3		Tv/DTV		TV/R
	4		4		AV/Source		AV
	5		5		Red/↑		Red
	6		6		Green/↓		Green
	7		7		Yellow		Yellow
	8		8		Blue		Blue
	9		9		[≡]		Text





Original		Replacement		Original	Replacement
	[≡+]/[X]		Format		
	[≡x]/[■ ■]		Subt		
	[≡o]		Options		
	[≡◇]/[+]/Wide		3D		
	[.≡]/[■ ■]		Back		
	[≡?]		Media		
	Guide/[≡i]		Guide		

