







 







 









 



 










 










 



















Original	Replacement	Original	Replacement
	Power		Power
	Screen		Picture / Format
	Lang		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	World		Smart / List
	Red/↑		Red / Netflix / Search
	Green/↓		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	[≡]		Text / Goto
	9		9
	0		0
	Recall		Back / Return
	Up		Up
	Menu		Menu / Home
	Right		Right
	Left		Left
	Return		Shift + Back / Return
	Return		Exit / Cancel / Clear
	Down		Down
	OK		OK
	Source		AV / Input / RDS
	FAV		Fav / Marker / PC
	Presets		Display / Media
	Sleep		Sleep / Timer
	Vol+		Vol+





	Original	Replacement	Original	Replacement
		 CH+ / Page+		
		 Info / Angle		
		 Mute / Dimmer		
		 Guide / EPG / -/--		
		 Vol-		
		 CH- / Page-		

