

 
 
 



 

 


 

 








 
 

 
 
 
 




 











 

 
 
 




 

 




 













Original	Replacement
 Power	 Power
 Sleep	 Sleep
 Cancel	 Shift + Back
 Repeat	 Shift + Text
 Play Mode	 Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10	 0
 Disc 3	 Yellow
 Disc 2	 Green

Original	Replacement
 Disc 1	 Red
 FM Mode/Mute	 Menu
 L Balance	 Text
 Balance R	 AV
 Tape Direction	 Exit
 Tape Display	 Back
 SEA Mode	 Subt
 S.A.Bass	 Options
 Surround Mode	 Dual
 Rec Pause	 Rec
 Fade Muting	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Up/PTY Search	 Up
 Play	 Play
 Down/RDS Display Mode	 Down
 Stop	 Stop




 







 
 

 
 

 

 



 





 











 



 

 



 

 









 








Original	Replacement	Original	Replacement
 Right/PTY Select+	 Right		
 >> >>	 >>		
 Left/PTY Select-	 Left		
 <</<<	 <<		



 

 
 
 








Original	Replacement	Original	Replacement
 Power	 Power	 <</><<	 <<
 Sleep	 Sleep	 Rec Pause	 Rec
 1	 1	 S.A. Bass	 Options
 2	 2	 Surround Mode	 Dual
 3	 3	 Up/PTY Search	 Up
 4	 4	 Down/PTY Display Mode	 Down
 5	 5	 Right/PTY Select+	 Right
 6	 6	 Left/PTY Select-	 Left
 7	 7	 Vol-	 Vol -
 8	 8	 Vol+	 Vol +
 9	 9	 FM Mode/Mute	 Menu
 10	 0	 Tape Direction	 Exit
 +10	 GUIDE	 Tape Display	 Back
 Play	 Play	 L Balance	 Text
 Stop	 Stop	 Balance R	 AV
 Fade Muting	 MUTE	 Play Mode	 Format
 >> >>	 >>	 Repeat	 Shift + Text










 









 

 







 

 






Original	Replacement	Original	Replacement
	Cancel	 + 	Shift + Back
	SEA Mode		Subt
	Disc 1		Red
	Disc 2		Green
	Disc 3		Yellow



 
 
 



Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 6	 6
 5	 5
 7	 7
 8	 8
 9	 9
 10	 0
 +10	 Guide
 Vol+	 Vol +
 Vol-	 Vol -
 Play	 Play
 Fade Muting	 Mute
 Stop	 Stop

Original	Replacement
 Surround Mode	 Dual
 S.A.Bass	 Options
 SEA Mode	 Subt
 Up/PTY Search	 Up
 Down/RDS Display Mode	 Down
 Right/PTY Select+	 Right
 left/PTY Select-	 Left
 Sleep	 Sleep
 FM Mode/Mute	 Menu
 Tape Direction	 Exit
 Tape Display	 Back
 L Balance	 Text
 Balance R	 AV
 Play Mode	 Format
 Repeat	 Shift + Text
 Cancel	 Shift + Back
 Disc 1	 Red




 







 










 


 

 










Original		Replacement		Original		Replacement	
	Disc 2		Green				
	Disc 3		Yellow				





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10	 0
 +10	 Guide
 Sleep	 Sleep
 Fade Muting	 Mute
 Play	 Play
 Stop	 Stop
 S.A. Bass	 Options

Original	Replacement
 Surround Mode	 Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Up/PTY Search	 Up
 Down/RDS Display Mode	 Down
 Right/PTY Select+	 Right
 Left/PTY Select-	 Left
 >> >>	 >>
 << <<	 <<
 FM Mode/Mute	 Menu
 Tape Direction	 Exit
 Tape Display	 Back
 L Balance	 Text
 Balance R	 AV
 Play Mode	 Format
 Repeat	 Shift + Text
 Cancel	 Shift + Back





	Original	Replacement	Original	Replacement
	SEA Mode	SUBT		
	Disc 1	A		
	Disc 2	B		
	Disc 3	C		

