






 





























Original	Replacement	Original	Replacement
 Power	 Power	 Green	 Green / APP / Repeat
 Home	 Menu / Home	 Yellow	 Yellow / YouTube / Repeat
 Guide	 Guide / EPG / +/-	 Blue	 Blue / Prime Video / Random
 UP	 Up	 1	 1
 I<	 I<< / Preset-	 2	 2
 Left	 Left	 3	 3
 OK	 OK	 4	 4
 Right	 Right	 5	 5
 >I	 >>I / Preset+	 6	 6
 Down	 Down	 7	 7
 Back	 Back / Return	 8	 8
 Option	 Setup / OPT /	 9	 9
 III	 Smart / List	 [...]	 Subtitle / EQ
 Vol+	 Vol+	 0	 0
 Mute	 Mute / Dimmer	 [I<>I]	 Picture / Format
 Vol-	 Vol-		
 Red	 Red / Netflix / Search		

