



Original	Replacement	Original	Replacement
Source	AV / Input / RDS	>10	Guide / EPG / -/--
Power	Power	0/10	0
DVD	Red / Netflix / Search	C	Exit / Cancel / Clear
TUN	Green / APP / Repeat	Tv Vol+	Shift + Vol+
V1	Blue / Prime Video / Random	Tv Vol-	Shift + Vol-
V2	Shift + Blue / Prime	Up/FQ+	Up
A1	Yellow / YouTube / Repeat	Up/FQ+	>> / Tune+
A2	Shift + Red / Netflix /	Left/ST-	Left
1	1	Left/ST-	I<< / Preset-
2	2	Right/ST+	Right
3	3	Right/ST+	>>I / Preset+
4	4	Down/FQ-	Down
5	5	Down/FQ-	<< / Tune-
6	6	Band	Display / Media
7	7	Station Memory	Smart / List
8	8	Mono	Audio / Lang I/II
9	9	1 Tv	Shift + 1

 












 
 



 
 
 










 


 
















 





 














Original	Replacement	Original	Replacement
2 Tv	Shift + 2	Menu Tv	Shift + Menu /
3 Tv	Shift + 3	Stop Tv	Shift + Stop /
4 Tv	Shift + 4	Play Tv	Shift + Play /
5 Tv	Shift + 5	Pause Tv	Shift + Pause / Step /
6 Tv	Shift + 6	Rec Tv	Shift + Rec / Rec Mode
7 Tv	Shift + 7	I<< Tv	Shift + I<< / Preset-
8 Tv	Shift + 8	>>I Tv	Shift + >>I / Preset+
9 Tv	Shift + 9	CH- Tv	Shift + CH- /
>10 Tv	Shift + Guide / EPG / -/-	CH+ Tv	Shift + CH+ /
0/10 Tv	Shift + 0	<< Tv	Shift + << /
C Tv	Shift + Exit / Cancel / Clear	>> Tv	Shift + >> /
Power Tv	Shift + Power	PGM Tv	Shift + D.Menu / Top Menu
Up Tv	Shift + Up	RDM Tv	Shift + Subtitle / EQ
Left Tv	Shift + Left	Disp Tv	Shift + Display / Media
Enter Tv	Shift + OK	Last Memory Tv	Shift + Back / Return
Right Tv	Shift + Right		
Down Tv	Shift + Down		





Original		Replacement		Original		Replacement	
	Source		AV / Input / RDS		Sleep		Sleep / Timer
	Power		Power		6		6
	DVD		Green / APP / Repeat		Time/Clock ADJ		Shift + Sleep / Timer
	TUN		Red / Netflix / Search		7		7
	V1		Blue / Prime Video / Random		[I]/DTS		Picture / Format
	V2		Shift + Blue / Prime		8		8
	A1		Yellow / YouTube / Repeat		Test Tone		Text / Goto
	A2		Shift + Red / Netflix /		9		9
	1		1		CH Select		Shift + Smart / List
	Midnight		Zoom / Size		>10		Guide / EPG / -/--
	2		2		Sound Control		Sound / Title
	P.Bass		Eject / Surround		0/10		0
	3		3		DSP		Setup / OPT /
	Function		Smart / List		C		Fav / Marker / PC
	4		4		Enter/Disc / DSP		Shift + OK
	FL Dimmer		Shift + Mute / Dimmer		TV CH+		Shift + CH+ /
	5		5		Tv Vol+		Shift + Vol+





Original	Replacement	Original	Replacement
System	Vol+	Return	Back / Return
TV CH-	Shift + CH- /	I<</Page-	I<< / Preset-
Tv Vol-	Shift + Vol-	>>I/Page+	>>I / Preset+
System	Vol-	<II/CH-	CH- / Page-
Tv Input	Shift + AV / Input / RDS	II>/CH+	CH+ / Page+
Power Tv	Shift + Power	<<	<< / Tune-
Mute	Mute / Dimmer	>>	>> / Tune+
Up/FQ+	Up	Top Menu	D.Menu / Top
Left/ST-	Left	PGM	TV/Radio /
Enter	OK	Subtitle	Subtitle / EQ
Right/ST+	Right	RDM	Shift + Display / Media
Down/FQ-	Down	Audio	Audio / Lang I/II
Exit	Exit / Cancel / Clear	Disp	Display / Media
Menu	Menu / Home	Last Memory	Shift + Back / Return
Stop	Stop / Hold	Angle	Info / Angle
Play	Play / Slow	Repeat	Shift + Green / APP / Repeat
Pause	Pause / Step / Freeze	A-B	Shift + Yellow / YouTube / Repeat





Original	Replacement	Original	Replacement
Source	AV / Input / RDS	0/10	0
Power	Power	C	Fav / Marker / PC
DVD	Green / APP / Repeat	Up / Pause	Up
TUN	Red / Netflix / Search	Left/ <<	Left
V1	Blue / Prime Video / Random	Enter/Play	Play / Slow
V2	Shift + Blue / Prime	Right/ >>	>> / Tune+
A1	Yellow / YouTube / Repeat	Down/Stop	Stop / Hold
A2	Shift + Red / Netflix /	Down/Stop	Down
1	1	Enter/Play	OK
2	2	Up / Pause	Pause / Step / Freeze
3	3	<  /CH-/ <<<	CH- / Page-
4	4	>/CH+/ >>>	CH+ / Page+
5	5	Left/ <<<	<<< / Tune-
6	6	Right/ >>>	Right
7	7	1 V2	Shift + 1
8	8	2 V2	Shift + 2
9	9	3 V2	Shift + 3





Original	Replacement	Original	Replacement
4 V2	Shift + 4		
5 V2	Shift + 5		
6 V2	Shift + 6		
7 V2	Shift + 7		
8 V2	Shift + 8		
9 V2	Shift + 9		
0/10 V2	Shift + 0		
TV Channel+	Shift + CH+ /		
TV Channel- V2	Shift + CH- /		
Up / Pause V2	Shift + Pause / Step /		
Left/<< V2	Shift + << /		
Right/>> V2	Shift + >> /		
Down/Stop V2	Shift + Stop /		
Down/Stop V2	Shift + Down		
Up / Pause V2	Shift + Up		
Left/<< V2	Shift + Left		
Right/>> V2	Shift + Right		






 

 






















 











 





















Original		Replacement		Original		Replacement	
	Source		AV / Input / RDS		>10		Guide / EPG / -/--
	Power		Power		0/10		0
	DVD		Green / APP / Repeat		C		Fav / Marker / PC
	TUN		Red / Netflix / Search		Up/Pause		Up
	V1		Blue / Prime Video / Random		Left/Left-Left		Left-Left / Tune-
	V2		Shift + Blue / Prime / Prime		Enter/Play		OK
	A1		Yellow / YouTube / Repeat		Right/Right-Right		Right-Right / Tune+
	A2		Shift + Red / Netflix / Netflix		Down/Stop		Stop / Hold
	1		1		Down/Stop		Down
	2		2		Enter/Play		Play / Slow
	3		3		Up/Pause		Pause / Step / Freeze
	4		4		I<<		I<< / Preset-
	5		5		>>I		>>I / Preset+
	6		6		Left/Left-Left		Left
	7		7		Right/Right-Right		Right
	8		8		PGM/Top Menu		TV/Radio /
	9		9		Subtitle/RDM		Subtitle / EQ





Original	Replacement	Original	Replacement
 Audio/Disp	 Display / Media	 Right/>> A2	 Shift + >> /
 Repeat	 Shift + Green / APP /	 Down/Stop A2	 Shift + Down
 1 A2	 Shift + 1	 Down/Stop A2	 Shift + Stop /
 2 A2	 Shift + 2	 Enter/Play A2	 Shift + OK
 3 A2	 Shift + 3	 Up/Pause A2	 Shift + Up
 4 A2	 Shift + 4	 I<< A2	 Shift + I<< / Preset-
 5 A2	 Shift + 5	 >>I A2	 Shift + >>I / Preset+
 6 A2	 Shift + 6	 Left/<< A2	 Shift + Left
 7 A2	 Shift + 7	 Right/>> A2	 Shift + Right
 8 A2	 Shift + 8	 PGM/Top Menu	 Shift + TV/Radio / Program
 9 A2	 Shift + 9	 RDM/Subtitle A2	 Shift + Subtitle / EQ
 >10 A2	 Shift + Guide / EPG / -/-	 Audio Disp A2	 Shift + Display / Media
 0/10 A2	 Shift + 0	 Repeat A2	 Shift + Yellow / YouTube /
 C A2	 Shift + Fav / Marker / PC		
 Up/Pause A2	 Shift + Pause / Step /		
 Left/<< A2	 Shift + << /		
 Enter/Play A2	 Shift + Play /		

Slow

