



Original	Replacement
	AV / Input / RDS
	Power
	Shift + OK
	Zoom / Size
	Shift + Smart / List
<</< button icon"/>	<< / Tune-
	Play / Slow
>>/ > button icon"/>	>> / Tune+
	Shift + D.Menu / Top Menu
	I<< / Preset-
	Stop / Hold
>>I button icon"/>	>>I / Preset+
	Shift + Setup / OPT / Tools
	Picture / Format
	Shift + Menu /
	D.Menu / Top
	Shift + Display / Media

Original	Replacement
	Exit / Cancel / Clear
	Display / Media
	Smart / List
	Fav / Marker / PC
	Guide / EPG / -/-
	Right
	Info / Angle
	Up
	OK
	Left
	Back / Return
	Down
	Setup / OPT /
	Menu / Home
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat






Original		Replacement		Original		Replacement	
	Blue		Blue / Prime Video / Random		Vol-		Vol-
	1		1		Prog-		CH- / Page-
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	[≡]/Text		Text / Goto				
	0		0				
	[...]		Subtitle / EQ				
	Vol+		Vol+				
	Prog+		CH+ / Page+				
	Mute		Mute / Dimmer				
	Audio		Audio / Lang I/II				



 






















 
 

 

 

 

 



 

 











 















Original	Replacement
 Power	 Power
 <</<	 << / Tune-
 Play	 Play / Slow
 >>/ >	 >> / Tune+
 <<	 << / Preset-
 Stop	 Stop / Hold
 >>	 >> / Preset+
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Right	 Right
 [i+]/Info	 Info / Angle
 Up	 Up
 Left	 Left
 Return	 Back / Return
 Down	 Down
 Home	 Shift + Home / Menu /
 1	 1

Original	Replacement
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [...]	 Subtitle / EQ
 Prog+	 CH+ / Page+
 Audio	 Audio / Lang I/II
 Prog-	 CH- / Page-





Original	Replacement	Original	Replacement
 Power	 Power	 Home	 Shift + Menu /
 <</<	 << / Tune-	 Red	 Red / Netflix / Search
 Play	 Play / Slow	 Green	 Green / APP / Repeat
 >>/ >	 >> / Tune+	 Yellow	 Yellow / YouTube / Repeat
 <<	 << / Preset-	 Blue	 Blue / Prime Video / Random
 Stop	 Stop / Hold	 1	 1
 >>	 >> / Preset+	 2	 2
 Top Menu	 D.Menu / Top	 3	 3
 Menu	 Menu / Home	 4	 4
 Right	 Right	 5	 5
 [i+]/Info	 Info / Angle	 6	 6
 Up	 Up	 7	 7
 OK	 OK	 8	 8
 Left	 Left	 9	 9
 Return	 Back / Return	 [≡]/Text	 Text / Goto
 Down	 Down	 0	 0
 Options	 Setup / OPT /	 [...]	 Subtitle / EQ





Original	Replacement	Original	Replacement
	Source		Home / Shift + Menu /
	Power		1
	<< / Tune-		2
	Play / Slow		3
	>> / Tune+		4
	I<< / Preset-		5
	Stop / Hold		6
	>>I / Preset+		7
	Top Menu / D.Menu / Top		8
	Menu / Home		9
	Right		[≡]/Text / Text / Goto
	[i+]/Info / Info / Angle		0
	Up		[...] / Subtitle / EQ
	OK		Vol+
	Left		Mute / Dimmer
	Return / Back / Return		Audio / Lang I/II
	Down		Vol-

