 



 



 





 

 

 
 
 





 













 

 
 


 







 

 



 

 

 

 





Original	Replacement	Original	Replacement
 Power	 Power	 Up/CH+	 Up
 Red	 Red / Netflix / Search	 Left	 Left
 TV/SAT	 TV/Radio /	 Vol-	 Vol-
 Green	 Green / APP / Repeat	 OK	 OK
 TV/♪	 Sound / Title	 Right	 Right
 Yellow	 Yellow / YouTube / Repeat	 Vol+	 Vol+
 Zoom	 Zoom / Size	 Down/CH-	 Down
 Blue	 Blue / Prime Video / Random	 P+	 CH+ / Page+
 Pause	 Pause / Step / Freeze	 FAV	 Fav / Marker / PC
 Audio	 Audio / Lang I/II	 P-	 CH- / Page-
 EPG	 Guide / EPG / -/-	 Recall	 Back / Return
 SubT	 Subtitle / EQ	 1	 1
 Text	 Text / Goto	 2	 2
 Exit	 Exit / Cancel / Clear	 3	 3
 Menu	 Menu / Home	 4	 4
 M/P	 Smart / List	 5	 5
 Mute	 Mute / Dimmer	 6	 6





Original		Replacement		Original		Replacement	
	7		7				
	8		8				
	9		9				
	Info		Info / Angle				
	0		0				
	Timer		Sleep / Timer				

