 

 

 


 
 

 

 

 



 

 
 








 



 




 



 



 







 

 


 


 

 


 













Original	Replacement
 Power	 Power
 Off Timer	 Sleep / Timer
 Input Tv	 Shift + AV / Input / RDS
 Input AV	 AV / Input / RDS
 Menu	 Menu / Home
 [+]/Aspect	 Picture / Format
 N	 D.Menu / Top
 OO/Surround	 Eject / Surround
 i	 Info / Angle
 X/Exit	 Exit / Cancel / Clear
 Viera Tools	 Display / Media
 Internet	 Smart / List
 Up	 Up
 Guide	 Guide / EPG / -/-
 Left	 Left
 OK	 OK
 Right	 Right

Original	Replacement
 Option	 Setup / OPT /
 Down	 Down
 Return/Back	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [≡]/Text	 Text / Goto
 [≡◆]/STTL	 Subtitle / EQ
 [≡i]/Index	 Sound / Title
 [≡+]/Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original		Replacement	
	7		7
	8		8
	9		9
	Mute		Mute / Dimmer
	0		0
	Last View		Fav / Marker / PC
	Vol+		Vol+
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	Power Down	 + 	Shift + Power
	Programme ▼	 + 	Shift + CH- /
	Programme ▲	 + 	Shift + CH+ /
	<</l<<		<< / Tune-
	Play		Play / Slow
	>>/>>l		>> / Tune+
	Stop		Stop / Hold

Original		Replacement	
	Pause/Step		Pause / Step / Freeze
	Rec		Rec / Rec Mode

