



Original	Replacement
Power	Power
Source	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV	TV/Radio /
0	0
Recall	Fav / Marker / PC
V+	Vol+
Mute	Mute / Dimmer
P+	CH+ / Page+

Original	Replacement
V-	Vol-
World/Internet	Smart / List
P-	CH- / Page-
Menu	Menu / Home
Q.Menu	D.Menu / Top
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Back	Back / Return
Exit	Exit / Cancel / Clear
i	Info / Angle
Music/Camera	Display / Media
TV Guide	Guide / EPG / -/-
*/O	Shift + 1
*/Q	Shift + 2





Original	Replacement	Original	Replacement
 [=]/Text	 Text / Goto		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Lang	 Audio / Lang I/II		
 [=]..	 Sound / Title		
 [-O-]	 Setup / OPT /		
 <<	 << / Tune-		
	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 ▶	 Play / Slow		
 ■	 Stop / Hold		

