 


 
 



 

 
 
 

 



 
 
 

 


 


 
 
 






 
 
 

 
 

 
 
 

 

 




 
 

 
 
 

 
 
 

 





 
 


Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Back
 Text	 Text
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep

Original	Replacement
 Audio	 Dual
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Source	 AV
 Display	 Info
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Menu	 Menu





Original	Replacement	Original	Replacement
	Exit		Exit
	Subtitle		Subt
	Index		List
	Size		Format
	Reveal		D. Menu
	Play/Hold		Play
	Pause		Pause
	I<</Cancel		I<<
	>>I/Subpage		>>I
	Stop		Stop
	Rec		Rec
	FAV		Pre Ch
	<</FAV-		<<
	>>/FAV+		>>
	Mix		Smart
	EPG		Guide
	Media		Media
			Timeshift
			Tv/Radio
			Options
			TV/R

