












 
















 








 

 



 



 

 

 

 

 

 
 


 

 


 








 



 


 





 

 
 












Original	Replacement	Original	Replacement
	Power		Power
	Info		Info
	Setup		Options
	Mute		Mute
	Menu		Menu
	Music		Media
	Copy		3D
	Zoom		Eject
	TV System		TV/R
	Source		AV
	Vol+		Vol +
	Vol-		Vol -
	Return		Back
	Home		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Timeshift		Sleep
	Goto		Pre Ch
	Rec		Rec
	Play		Play
	Stop		Stop





Original	Replacement
 PAUSE	 Pause
 PREV	 I<<
 NEXT	 >>I
 FR	 <<
 FF	 >>
 SLOW	 PICTURE FORMAT
 A-B	 E-MANUAL D.MENU
 TIMER	 SHIFT + TIMER AV
 RECLIST	 DISC NAV LIST
 SUBTITLE	 AD SUBT
 REPEAT	 SHIFT + REPEAT TEXT
 AUDIO	 SOUND DUAL
 Red	 A
 EPG	 B
 TTX	 C
 Blue	 D
 TTX	 REPEAT TEXT

Original	Replacement
 EPG	 - / - GUIDE

