 

 

 

 


 
 


 
 
 
 

 
 


 
 
 

 
 
 


 
 

 
 
 

 
 
 


 
 


 
 


 

 

 



 

 

 






Original		Replacement		Original		Replacement	
	Power		Power		Dn		Down
	12/24H		Smart		Right		Right
	1		1		Left		Left
	2		2		OK		Ok
	3		3		F1		List
	4		4		F2		Dual
	5		5		F3		Subt
	6		6		F4		Options
	7		7		F5		Sleep
	8		8		F6		TV/R
	9		9		F7		Format
	0		0		F8		3D
	Pause		Pause		F9		Red
	Restart		Back		F10		Green
	Exit		Exit		F11		Yellow
	Select		Menu		F12		Blue
	Up		Up				

