



Original	Replacement	Original	Replacement
Power	Power	Blue/[]	Blue
Vol+	Vol +	Info	Info
Vol-	Vol -	Text	Text
PR+	Ch +	1	1
PR-	Ch -	2	2
Mute	Mute	3	3
Menu	Menu	4	4
Exit	Exit	5	5
Back	Back	6	6
OK	Ok	7	7
Up	Up	8	8
Down	Down	9	9
Right/Zoom+	Right	0/-/--	0
Left/Zoom-	Left	AV	AV
Red/[o]	Red	SP/LP	Media
Green/Timer/List	Green	Play	Play
Yellow	Yellow	>>	>>





	Original	Replacement	Original	Replacement
	<<	 <<		
	Stop	 Stop		
	Pause	 Pause		
	Rec	 Rec		
	Mark	 3D		
	0000	 GUIDE		


 
 

 





Original	Replacement	Original	Replacement
Power	Power	Blue/[]	Blue
Vol+	Vol +	Info	Info
Vol-	Vol -	Text	Text
Mute	Mute	Play	Play
PR+	Ch +	Stop	Stop
PR-	Ch -	Rec	Rec
Exit	Exit	Pause	Pause
Menu	Menu	>>	>>
Back	Back	<<	<<
Up	Up	1	1
Down	Down	2	2
Right/Zoom+	Right	3	3
Left/Zoom-	Left	4	4
OK	Ok	5	5
Red/[o]	Red	6	6
Green/Timer/List	Green	7	7
Yellow	Yellow	8	8





	Original	Replacement	Original	Replacement
	9	 9		
	AV	 AV		
	SP/LP	 Media		





Original	Replacement	Original	Replacement
Power	Power	Blue/[]	Blue
Vol+	Vol +	Info	Info
Vol-	Vol -	Text	Text
Mute	Mute	1	1
PR+	Ch +	2	2
PR-	Ch -	3	3
Menu	Menu	4	4
Exit	Exit	5	5
Back	Back	6	6
Up	Up	7	7
Down	Down	8	8
Right/Zoom+	Right	9	9
Left/Zoom-	Left	0/-/--	0
OK	Ok	AV	AV
Red/[o]	Red	SP/LP	Media
Green/Timer/List	Green	Play	Play
Yellow	Yellow	Stop	Stop





	Original	Replacement		Original	Replacement
	>>		>>		
	<<		<<		
	Rec		Rec		
	Pause		Pause		
	Mark		3D		
	0000		GUIDE		

	Original	Replacement

