






 

 





	Original	Replacement		Original	Replacement
	Power	Power		Exit	Exit
	Mute	Mute		Up	Up
	1	1		Down	Down
	2	2		Right	Right
	3	3		Left	Left
	4	4		Ok	Ok
	5	5		Vol+	Vol +
	6	6		Vol-	Vol -
	7	7		Sound	Shift + Dual
	8	8		Pic	Shift + Format
	9	9		Ch+	Ch +
	0	0		Ch-	Ch -
	Audio	Dual		Sleep	Sleep
	Recall	Back		Aspect	Format
	Tv Menu	Menu		Freeze	Eject
	Source	AV		Tv/Radio	TV/R
	ChList	List		Text	Text





Original	Replacement
 Epg	 Guide
 Fav	 Pre Ch
 Info	 Info
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Reveal	 Media
 Hold	 D. Menu
 Index	 Shift + Info
 Subpage	 Shift + AV
 List	 Smart
 Mix	 Options
 Subtitle	 Subt
 Size	 3D
 <<	 <<
 >>	 >>

Original	Replacement
 I<<	 I<<
 >>I	 >>I
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Rec/Rep	 Rec

