








 


 
 


 
 



 

 





 


 




 

 
 
 







 

 

 



 

 



 

 

 




Original	Replacement	Original	Replacement
 Power	 Power	 Exit	 Exit
 Mute	 Mute	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 Ok	 Ok
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 Sound	 Shift + Dual
 8	 8	 Pic	 Shift + Format
 9	 9	 Ch+	 Ch +
 0	 0	 Ch-	 Ch -
 Audio	 Dual	 Sleep	 Sleep
 Recall	 Back	 Aspect	 Format
 Tv Menu	 Menu	 Freeze	 Eject
 Source	 AV	 Tv/Radio	 TV/R
 ChList	 List	 Text	 Text





Original		Replacement		Original		Replacement	
	Epg		Guide		I<<		I<<
	Fav		Pre Ch		>>I		>>I
	Info		Info		Play		Play
	Red		Red		Pause		Pause
	Green		Green		Stop		Stop
	Yellow		Yellow		Rec/Rep		Rec
	Blue		Blue				
	Reveal		Media				
	Hold		D. Menu				
	Index		Shift + Info				
	Subpage		Shift + AV				
	List		Smart				
	Mix		Options				
	Subtitle		Subt				
	Size		3D				
	<<		<<				
	>>		>>				

