





























 




 







Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV	 AV / Input / RDS
 ? / Audio	 Audio / Lang I/II
 PIP / Repeat	 Fav / Marker / PC
 PIP / Repeat	 Shift + Green / APP /
 [<>] / [...]	 Shift + Picture / Format
 [<>] / [...]	 Subtitle / EQ

Original	Replacement
 Mute / [Q]	 Mute / Dimmer
 i	 Info / Angle
 Z / Back	 Back / Return
 CH+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 CH-	 CH- / Page-
 TXT/Menu	 Menu / Home
 TXT/Menu	 Text / Goto
 TV-G/Top Menu	 D.Menu / Top
 TV-G/Top Menu	 Guide / EPG / -/-
 Red / Eye	 Red / Netflix / Search





 
 

 

 






























 

 









 

 

 







 

 

	Original	Replacement	Original	Replacement
	Rec	Rec / Rec Mode		
	Green / Timer	Sleep / Timer		
	Play	Play / Slow		
	Green / Timer	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Pause	Pause / Step / Freeze		
	Blue / Audio	Shift + Audio / Lang I/II		
	Stop	Stop / Hold		
	Blue / Audio	Blue / Prime Video / Random		
	Scan	Smart / List		
	I<	I<< / Preset-		
	PAT	Eject / Surround		
	>I	>>I / Preset+		
	S	Sound / Title		
	<<	<< / Tune-		
	P	Picture / Format		
	>>	>> / Tune+		









 



Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV	 AV / Input / RDS
 i	 Info / Angle
 z	 Exit / Cancel / Clear
 Up	 Up
 CH+	 CH+ / Page+
 Left	 Left

Original	Replacement
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 CH-	 CH- / Page-
 Menu	 Menu / Home
 Top Menu	 D.Menu / Top
 Red	 Red / Netflix / Search
 Rec	 Rec / Rec Mode
 Green	 Green / APP / Repeat
 Play	 Play / Slow
 Yellow	 Yellow / YouTube / Repeat
 Pause	 Pause / Step / Freeze
 Blue	 Blue / Prime Video / Random
 Stop	 Stop / Hold
 I<	 I<< / Preset-





Original		Replacement		Original		Replacement	
	>I		>>I / Preset+				
	<<		<< / Tune-				
	>>		>> / Tune+				

