


 
 
 






 





 





 
 







	Original	Replacement	Original	Replacement
	Power			
	Mute			
	Menu			
	CH+			
	CH-			
	Up			
	Down			
	Right			
	Left			
	OK			
	Vol+			
	Vol-			
	Z			
	TV-G			
	AV	