





 

 
 
 

 




 


 














 
 




	Original	Replacement	Original	Replacement
	On/Standby	 Power		
	Source Power	 Shift + Power		
	1	 1		
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		
	Vol+	 Vol +		
	Vol-	 Vol -		
	Mute	 Mute		
	Channel+	 Ch +		
	Channel-	 Ch -		





Original	Replacement	Original	Replacement
 On/Standby	 Power	 <</Channel-	 <<
 Play	 Play	 >>/Tuning+	 >>
 Stop	 Stop	 <</Tuning-	 <<
 Still/Pause	 Pause	 DVS/Stereo	 Dual
 Mute	 Mute	 Display	 Info
 Vol+	 Vol +	 Subwoofer Level+	 Ch +
 Vol-	 Vol -	 Subwoofer Level-	 Ch -
 Push/Enter	 Ok	 Source Power	 Shift + Power
 Up	 Up	 DVD/CD	 Red
 Down	 Down	 FM/AM	 Green
 Right	 Right	 AUX	 Yellow
 Left	 Left	 iPod	 Blue
 Menu/Guide	 Guide	 Home	 Smart
 Top Menu	 Menu	 Net/USB	 Media
 Return	 Back	 1	 1
 Tool	 Options	 2	 2
 >> /Channel+	 >>	 3	 3










 









 
 
 
 
 
 


 
 

 




 


	Original	Replacement		Original	Replacement
	4				4
	5				5
	6				6
	7				7
	8				8
	9				9
	0				0
	+10				Pre Ch
	Clear				Exit
	HDMI				Shift + Media
	Sleep				Sleep
	Call				Shift + Pre Ch
	Program				Shift + Sleep
	Repeat				Text
	Random				TV/R
	Status				AV
	Tone				List

	Original	Replacement		Original	Replacement
	Audio RDS				Shift + Dual
	Subtilte/PTY				Subt
	Angle/CT				3D
	Zoom/RT				Eject
	Surround				Format
	Surround				D. Menu
	Memo				Rec














 




 









	Original	Replacement		Original	Replacement
	On/Standby	 Power			
	Source Power	 Shift + Power			
	Channel+	 Ch +			
	Channel-	 Ch -			
	Vol+	 Vol +			
	Vol-	 Vol -			
	Mute	 Mute			
	1	 1			
	2	 2			
	3	 3			
	4	 4			
	5	 5			
	6	 6			
	7	 7			
	8	 8			
	9	 9			
	0	 0			





Original	Replacement	Original	Replacement
 On/Standby	 Power		
 Source Power	 Shift + Power		
 Play	 Play		
 Stop	 Stop		
 Still/Pause	 Pause		
 >>	 >>		
 <<	 <<		
 Channel+	 Ch +		
 Channel-	 Ch -		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Mute	 Mute		

