



Original	Replacement	Original	Replacement
 Power	 Power	 Option	 Options
 1	 1	 Back/Return	 Back
 2	 2	 Play/x1.3	 Play
 3	 3	 Pause	 Pause
 4	 4	 Stop	 Stop
 5	 5	 >>I	 >>I
 6	 6	 I<<	 I<<
 7	 7	 >>	 >>
 8	 8	 <<	 <<
 9	 9	 OK	 Ok
 0	 0	 Up	 Up
 Input Select	 AV	 Down	 Down
 Guide	 Guide	 Right/I>	 Right
 Exit	 Exit	 Left/<I	 Left
 i/Status	 Info	 Red	 Red
 Function Menu	 Menu	 Green	 Green
 Direct Navigator/Pop-Up Menu	 List	 Yellow	 Yellow



