



| Original | Replacement | Original | Replacement |
|---|-------------|---|-------------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | [<>] |  | Format |
|  | ♪ |  | Dual |
|  | [] |  | 3D |
|  | PAT |  | Smart |
|  | PIP Sel |  | Play |
|  | PIP Pos |  | Pause |
|  | PIP Size |  | Stop |
|  | AV |  | AV |
|  | PC |  | Media |
|  | TV |  | TV/R |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Zoom |  | Eject |
|  | Swap |  | Pre Ch |
|  | Swap |  | Back |
|  | PR- |  | Ch - |
|  | PR+ |  | Ch + |
|  | Vol- |  | Vol - |
|  | Vol+ |  | Vol + |
|  | Up |  | Up |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Left |  | Left |
|  | OK / Freeze |  | Ok |





| Original | Replacement | Original | Replacement |
|----------|----------------------------|----------|-------------|
| | DISPLAY INFO Info | | |
| MENU | TOP MENU MENU Menu | | |
| | SETTINGS OPT Options | | |
| | E-MANUAL D.MENU D. Menu | | |
| | AD SUBT Subt | | |
| | A Red | | |
| | B Green | | |
| | C Yellow | | |
| | D Blue | | |
| | REPEAT TEXT Text | | |
| | CLEAR EXIT Exit | | |
| | -/-- GUIDE Guide | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

