 


 

 
 
 












 
 
 


 

 


 
 

 






Original	Replacement
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Back
 Source	 AV
 P.Std	 Format

Original	Replacement
 S.Std	 Dual
 Menu ATV	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol +	 Vol +
 Vol -	 Vol -
 Program +	 Ch +
 Program -	 Ch -
 Freeze / Eject	 Eject
 Info / Display	 Info
 Menu DVB	 D. Menu
 I / II	 Shift + Dual
 TTX / Play / Pause	 Text
 TTX / Play / Pause	 Play





	Original	Replacement	Original	Replacement
	Exit / Stop			
	Exit / Stop			
	EPG / Title			
	FAV			
	TV / R			
	Sub			
	Aspect			
	Mix / A-B			
	Red			
	I<<			
	Green			
	>>I			
	Yellow			
	<<			
	Blue			
	>>			

