 






 









 

 

 







 







 
 
 

 

 



 

 

 

 




 
 

 




 




Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		Home		Menu / Home
	1		1		P-		CH- / Page-
	2		2		Netflix		Shift + Red / Netflix /
	3		3		YouTube		Shift + Yellow / YouTube /
	4		4		Guide		Guide / EPG / -/-
	5		5		Up		Up
	6		6		i		Info / Angle
	7		7		Left		Left
	8		8		OK		OK
	9		9		Right		Right
	Lang		Audio / Lang I/II		Down		Down
	0		0		Back		Back / Return
	TXT		Text / Goto		Exit		Exit / Cancel / Clear
	Vol+		Vol+		*1		Smart / List
	Mute		Mute / Dimmer		prime video		Shift + Blue / Prime
	P+		CH+ / Page+		Red		Red / Netflix / Search





Original	Replacement	Original	Replacement
	Green  Green / APP / Repeat		
	Yellow  Yellow / YouTube / Repeat		
	Blue  Blue / Prime Video / Random		
	<<  << / Tune-		
	Pause  Pause / Step / Freeze		
	>>  >> / Tune+		
	Rec  Rec / Rec Mode		
	Play  Play / Slow		
	Stop  Stop / Hold		

