






 

 



 


 


 





 







 

 



 







 



 

 

 



 




 


 




Original		Replacement		Original		Replacement	
	Standby		Power		System		Smart
	Monitor		Media		Select		Info
	Tv/DVD		TV/R		Timer		AV
	T/C		Subt		Tv Vol+		Vol +
	Play Mode		Shift + Play		OK		Ok
	Rec Mode		Shift + Rec		Tv Vol-		Vol -
	1		1		CH+		Ch +
	2		2		CH-		Ch -
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		Scissors/FSS		Options
	8		8		Return		Back
	9		9		Clear		Exit
	0		0		Play		Play
	Disc		Menu		I<<		I<<



