

 




 

 



 
 



 

 









 

 



 





 

















Original	Replacement	Original	Replacement
 Power	 Power	 5/Scan	 5
 Stop	 Stop	 6/Repeat	 6
 Pause	 Pause	 7	 7
 Play	 Play	 8	 8
 I<< Track/Search	 I<<	 9	 9
 Track/Search >>I	 >>I	 0	 0
 Menu	 Menu	 Aspect	 Format
 Return	 Back	 Game	 Smart
 Up	 Up	 DVD Menu	 D. Menu
 Down	 Down	 OSD/Track	 Text
 Right	 Right	 Title/Title Chapter	 Options
 Left	 Left		
 Enter	 Ok		
 1/Subtitle	 1		
 2/Audio	 2		
 3/Angle	 3		
 4/Random	 4		

