








 


Original	Replacement
 Power	 Power
 Source	 AV
 blank	 TV/R
 [> <]	 Options
 square	 D. Menu
 Red / Rec / Movie	 Red
 Red / Rec / Movie	 Rec
 Green / << /	 Green
 Green / << /	 <<
 Yellow / Stop / Child	 Yellow
 Yellow / Stop / Child	 Stop
 Blue / Play / News	 Blue
 Blue / Play / News	 Play
 >> / Other	 >>
 Guide	 Guide
 Text	 Text
 Up	 Up

Original	Replacement
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Menu	 Menu
 V +	 Vol +
 V -	 Vol -
 Mute	 Mute
 P +	 Ch +
 P -	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7





 





 


 
 

 





 

 

 
 
 


 











 



 






 


 





 
 


 


Original	Replacement
 8	 8
 9	 9
 0	 0
 i+	 INFO Info
 P < P / -/-	 PRE-CH Pre Ch
 Smart Sound	 SHIFT + MEDIA Shift + Media
 Active Control	 SMART Smart
 Smart Picture	 MEDIA Media
 [1 2]	 3D 3D
 [< >]	 SUBT Subt
 []	 EXIT Exit
 small squares	 SLEEP Sleep
 Timer	 SHIFT + AV Shift + AV
 [?]	 BACK Back
 Zoom	 ZOOM Eject
 I-II	 DUAL Dual
 Instant Rec	 SHIFT + REC MODE Shift + Rec

Original	Replacement
 Format	 PICTURE FORMAT Format
 DNR	 DISC NAV LIST List
 Instant Stop	 SHIFT + Stop Shift + Stop





Original	Replacement	Original	Replacement
	Power		Power
	Rec		Rec
	<<		<<
	<<		I<<
	Stop		Stop
	Play		Play
	>>		>>
	>>		>>I
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Text		Text
	Menu		Menu
	P +		Ch +
	P -		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i+		Info
	P < P / -/--		Pre Ch
	Timer		AV
	[?]		D. Menu
	Zoom		Eject
	I / II		Dual

