







 



 







 


 
 



 



 









 







 

 



 















 









 





Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu / Home
 <<	 << / Tune-	 9	 9
 >>	 >> / Tune+	 0/AV	 AV / Input / RDS
 Stop	 Stop / Hold	 0/AV	 0
 Wide	 Picture / Format	 i	 Info / Angle
 Red	 Red / Netflix / Search	 Up	 Up
 Green	 Green / APP / Repeat	 Cancel	 Shift + Exit / Cancel / Clear
 Yellow/><	 Yellow / YouTube / Repeat	 Left	 Left
 Blue	 Blue / Prime Video / Random	 Right	 Right
 1	 1	 Exit	 Exit / Cancel / Clear
 2	 2	 Down	 Down
 3	 3	 OK	 OK
 4	 4	 Play	 Play / Slow
 5	 5	 Pause	 Pause / Step / Freeze
 6	 6	 Lang(AD)	 Audio / Lang I/II
 7	 7	 Subt.	 Subtitle / EQ
 8	 8	 FAV	 Fav / Marker / PC





Original	Replacement	Original	Replacement
 Tv/Radio	 TV/Radio /		
 P+	 CH+ / Page+		
 Vol+	 Vol+		
 Guide	 Guide / EPG / -/--		
 Mute	 Mute / Dimmer		
 Text	 Text / Goto		
 P-	 CH- / Page-		
 Vol-	 Vol-		

Original	Replacement	Original	Replacement

