


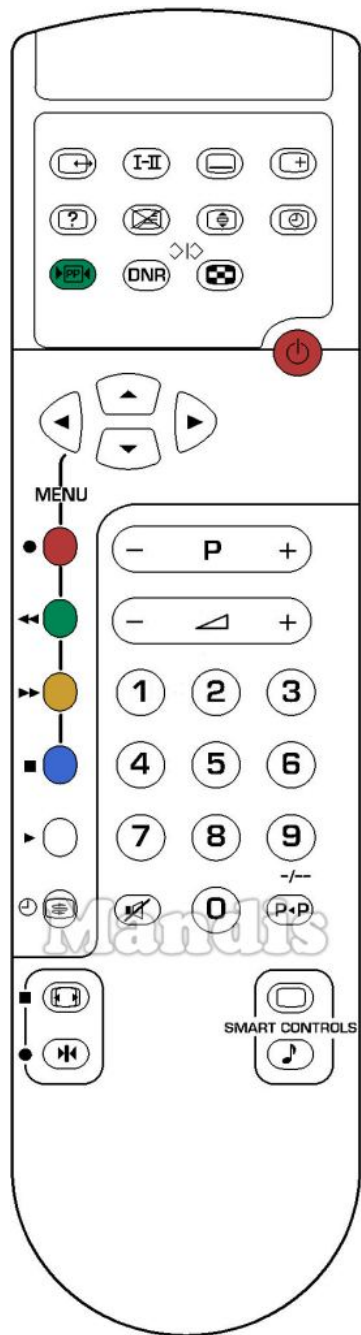



Original	Replacement	Original	Replacement
 Power	 Power	 Red / Menu	 Red
 ><>	 Shift + Menu	 Red / Menu	 Shift + Format
 Source	 AV	 Green / Menu	 Green
 I - II	 Dual	 Green / Menu	 Shift + Dual
 Subtitles	 Subt	 Yellow / Other	 Yellow
 [i+]	 Info	 Yellow / Other	 Menu
 [?]	 D. Menu	 Blue / OK	 Blue
 Mix	 TV/R	 Blue / OK	 Ok
 Zoom	 Eject	 Special Audio	 Shift + Subt
 Time	 Shift + AV	 Text	 Text
 [PP]	 Back	 P -	 Ch -
 DNR	 Options	 P +	 Ch +
 Mosaic	 Guide	 Vol -	 Vol -
 Up	 Up	 Vol +	 Vol +
 Down	 Down	 1	 1
 Right	 Right	 2	 2
 Left	 Left	 3	 3





	Original	Replacement		Original	Replacement
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Mute		Mute		
	P < P		Pre Ch		
	Format		Format		
	Freeze		Pause		
	Smart Controls Picture		Smart		
	Smart Controls Audio		Media		





Original		Replacement		Original		Replacement	
	Power		Power		Stop		Stop
	Time		TV/R		Play		Play
	Zoom		3D		Timer		Shift + AV
	Mix		Text		P-		Ch -
	[?]		Shift + Info		P +		Ch +
	[i+]		Info		1		1
	Freeze/Rec		Pause		2		2
	Format/Stop		Format		3		3
	Source		AV		4		4
	I-II		Dual		5		5
	Up		Up		6		6
	Down		Down		7		7
	Right		Right		8		8
	Left		Left		9		9
	Rec		Rec		0		0
	<<		<<		-/--		Guide
	>>		>>				

