




















 











 

 



 

 

 

 

 


 















Original	Replacement	Original	Replacement
	Power		Power
	Menu		Menu / Home
	P-		CH- / Page-
	I<		I<< / Preset-
	Up		Up
	P+		CH+ / Page+
	>I		>>I / Preset+
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Find		Shift + Red / Netflix /
	Options		Setup / OPT /
	Back		Back / Return
	Mute		Mute / Dimmer
	Vol+		Vol+
	Exit		Exit / Cancel / Clear
	Vol-		Vol-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Adjust		D.Menu / Top
	0		0
	Source		AV / Input / RDS





	Original	Replacement
	Subtitle	 Subtitle / EQ
	Stop	 Stop / Hold
	Pause	 Pause / Step / Freeze
	Text/Info	 Text / Goto
	Text/Info	 Info / Angle
	<<	 << / Tune-
	Play	 Play / Slow
	>>	 >> / Tune+

Original	Replacement

